

Continued installing fasteners for attachment of the wing tip lenses. Drilled the nutplate ear holes and countersunk the rivet holes for countersunk rivets.




deburred and countersunk the lenses for #6 screws.



close up image of the countersink.



Next installed the nutplates with pulled rivets. I didn't like the idea of using the rivet gun on epoxy to set some solid rivets. I will use some epoxy to close up the holes in the pulled rivets. After painting this will all be smooth.

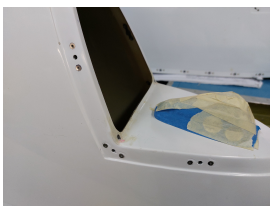

lens installed with cleco's in the nutplates, I did a test install with the tinnerman washers and a #6 screw in the corner.



Category: 5.3. Systems

Published: Monday, 17 February 2025 17:53

Hits: 427

---

Repeated the work on the other tip.

